



goslyn™ OPERATING INSTRUCTIONS

Your goslyn™ is a unique and effective grease separation system that will give many years of great service with just a little assistance from you.

The grease laden wastewater is passed into the goslyn™ from the **Inlet Pipe** and is filtered through the **Strainer Basket** to separate any solid particles before the liquid enters the **Separation Chamber** where the oil is separated. The separated oil passes through the **Oil Outlet** where it is delivered to the **Oil Container**. The clean wastewater, without the solids or oil contamination, flows out of the **Outlet Pipe** and away to the drain. The goslyn™ is equipped with a **Heater** to maintain the temperature at settings from 100 to 108° F (higher temperature is available to prevent any animal fats from solidifying at times of no flow). The goslyn™ is also equipped with a self-closing **Silt Removal Valve** for periodic purging of settled silts.

Daily Operating Procedures:

- Empty and clean the Strainer Basket (minimum of once per day).
- Empty or change the Oil Container whenever it is full (check daily).
- Verify that the Heater is operational by checking the light on the heater box.
- Empty the settled silts through the Silt Removal Valve
- Clean the Oil Outlet Valve and Spout as needed
- Check and wipe clean the area under the lid

(Please review the following detailed information for the above procedures)

INLET STRAINER BASKET

The regularity with which the Strainer Basket will require emptying will depend upon the operating conditions under which it is working and can only be determined by trial. We suggest you start by checking the basket after every 4 hours of operation until experience dictates the correct frequency of cleaning.

To remove the basket, first ensure that all sinks leading to the goslyn™ are closed off. Open the small section of lid above where the Inlet Pipe is, reach in for the handle of the basket and lift vertically until the basket is clear of the top of the unit. Empty the basket into a suitable waste bin and clean the basket. Replace the basket ensuring that it seats properly. **Note: the Strainer Basket is designed so that it can only fit in the proper direction. Be sure the basket faces the correct direction when putting back in place.** Close the lid.

Check that wastewater in the inlet chamber is not too hot. If it is, run some cold water through the system prior to removal of the basket.



OIL CONTAINER

The Oil Container is a clear plastic container that slides onto the underside of the container holder (shroud) on the front of the goslyn™. The level of oil or grease can readily be seen. When the container is full it can be removed by sliding the container out. The container can be emptied into a suitable larger container for disposal or recycling in the usual manner. A second container is provided to enable the container to be emptied and cleaned while the unit is still operating. We recommend the Oil Container be washed out occasionally for hygienic reasons. To refit the container, place it in position under the oil outlet and slide onto the container holder. Check that it is securely placed and pushed all the way to the rear of the container holder.

HEATER

The heater is supplied with one indicator light to indicate that the power is switched on. Check daily that the light is on.

SILT REMOVAL

Because the wastewater has residence time in the goslyn™ to allow oil to separate, the sediment will tend to settle. This sludge will need to be removed occasionally. To remove the sludge, open the water tap on a sink and allow the water to flow through the goslyn™ and, at the same time, operate the spring loaded self closing silt removal valve. Allow the silt to flow into the drain for approximately 10 secs and then close the silt drain valve. This should be done daily.

OPENING THE SILT VALVE FOR LONGER THAN 10 SECONDS COULD LOWER THE LEVEL INSIDE THE UNIT BELOW THE HEATER- POSSIBLY RESULTING IN OVERHEATING.

OIL OUTLET VALVE

The Oil Outlet Valve and Spout should be cleaned daily. To access the Oil Outlet Valve, open the lid above and behind the Waste Oil Container. You can now see the Oil Outlet Valve and Spout. Using the BOTTLEBRUSH supplied, simply clean the vertical and angled oil pipes.

CLEANING

Your goslyn™ should be wiped down daily with stainless steel cleaner to maintain a clean surface and good appearance.

The lid should be removed weekly and any condensation on the inside wiped off with a cleaning cloth. Warm water and soap can be used if necessary.



MAINTENANCE

Your goslyn™ will require very little maintenance but it should be turned off, drained and thoroughly cleaned out once or twice per year depending on the type of application. The Oil Outlet Valve Assembly should be dismantled and the non-return ball and seating cleaned. The heater should be checked and descaled and the setting of the thermostat confirmed. This cleaning may be required more often if the waste liquids contain high proportions of sediments. We would strongly recommend trained agents carry out these tasks.

TROUBLESHOOTING

Oil separating but not being discharged –

This may be due to fats solidifying in the oil outlet system – Check that the heater is plugged in. If it is, check the temperature in the inlet chamber and adjust thermostat setting if a higher temperature is required for animal fats.

The oil outlet valve may be stuck due to semi-solidified or sticky oils. First check the heater as above; if satisfactory then the stuck valve may be cleared by cleaning with the bottlebrush provided. The oil outlet assembly should be cleaned out as detailed above as soon as possible.

Oil being discharged with the wastewater even though the unit is discharging oil as normal-

This is usually an indication that the unit is being overloaded and the waste is not resident in the unit for a long enough period to allow full separation to take place or the silt release valve has not been operated and there is a silt build up in the unit thereby reducing residence time within the goslyn™. Operate the silt release valve as described above.

Sinks leading to the goslyn™ are draining slow-

This is usually an indication that the Strainer Basket has not been emptied. Please remove, clean and replace the Strainer Basket.

Wastewater effluent is overflowing into the center section and/or spilling out of the goslyn™-

This is usually an indication that the Strainer Basket has not been emptied. Please remove, clean and replace the Strainer Basket.

See the website for an agent near you – www.goslyn.com
or email us at service@goslyn.com

PHONE: 888-648-5040 for assistance